 


 



# OTP Token User Manual



## I. The function keys

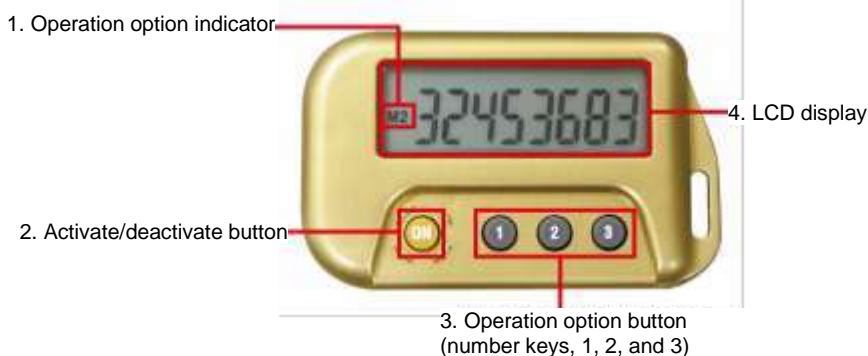

## II. Method of operation

- (I) You just need to press the  button once to activate the OTP and the LCD display will show an 8-digit password. Each password cannot be forecasted, repeated, and is valid for one time. This is for your protection and authentication of your user identity. When the e-banking transaction is in progress, you will be prompted to enter the password. Transaction will start only if you enter the correct password. After the transaction, press the  key once to deactivate the OTP Token.
- (II) You may want to confirm the serial code of the OTP Token, just press  and hold the key, and then press the  key, the LCD display will immediately show the 8-digit code. For example, 00000011, it will be the serial code of this token device.

## III. Replacement of battery

- (I) If the top right corner of the LCD display of the OTP Token indicated low battery level or the content displayed becomes blurred, it means the battery power is low and you should replace the battery.
- (II) Follow the steps specified below to replace the battery without affecting the internal setting of the OTP Token:
  1. Press the  key to deactivate the OTP Token.
  2. You have just 3 minutes to complete the replacement of battery. Do not press the  key in the replacement process.



## IV. Warning (※ pay attention to the following to avoid causing damage to the token ※)

- (I) Keep the token out of water, rainfall, or other solvents.
- (II) Avoid dropping the token from high altitude, heavy impact, high pressure, or exposure to high temperature or strong sunlight.

## V. Should you require further assistance, please contact our supervisory expert at (02)2348-1142, 1168, 4688, or, call our 24-hour service hotline at :(02)2181-1111.